

Для перезапуска энкодера AW-8010

1. Включите DISP SW # 6,7 и 8 на ZUEP 52903
2. Включите питание
3. F5[NEXT KEY] --> F5[NEXT KEY] --> STANDARD POSITION SETTING (ORIGIN POSITION)
4. F1[AXIS SELECT] --> RT --> [STORE] --> [END]
5. F4[ENCODER RESET] --> F1[ORIGIN POSIT.] --> servo power ON, match the mark of RT axis
--> [3] [9] [STORE] --> panel[END]
6. F4[ENCODER RESET] --> F1[ROTATION] --> servo power ON, match the mark of RT axis
--> [3] [9] [STORE] --> panel[END]
7. Выключите питание
8. Выключите Disp SW # 6,7 & 8 на ZUEP 52903

